


Order No.
63819-0600

molex

Application Tooling Specification Sheet

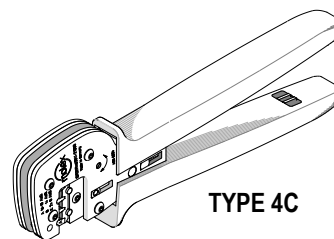

FEATURES

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomic soft grip handles for comfortable crimping
- Right- and left-handed applications
- Easy handling due to outstanding force ratio
- A precision user-friendly terminal locator with wire stop that holds terminals in the proper crimping position
- This tool is IPC/WHMA-A-620 compliant
- Tooling can be installed in the 63816-1915 Power Crimp Head, which is installed into the 63816-0270 (110 V) or 63816-0280 (220 V) Battery Powered Tools and the 63816-1900 Electric Crimp Machine
- This tool is RoHS compliant; however, RoHS compliance is not required


SCOPE

Products: 1.80mm (.070") Wide VersaBlade™ Wire –to-Wire Crimp Terminal, 14-18 AWG.

Terminal Series No.	Terminal Order No.	Wire Size		◆ Insulation Diameter Maximum		Strip Length	
		AWG	mm ²	mm	in	mm	in
35745	35745-0210	14-18	2.00-0.80	3.80	.150	4.00-4.80	.157-.189
35746	35746-0210	14-18	2.00-0.80	3.80	.150	4.00-4.80	.157-.189
35747	35747-0210	14-18	2.00-0.80	3.80	.150	4.00-4.80	.157-.189
35748	35748-0210	14-18	2.00-0.80	3.80	.150	4.00-4.80	.157-.189

◆ The terminals above are reeled parts only. Customer to cut off terminal from reel: 0.30mm (.012") maximum.
◆ See Conditions on Page 2.


DEFINITION OF TERMS

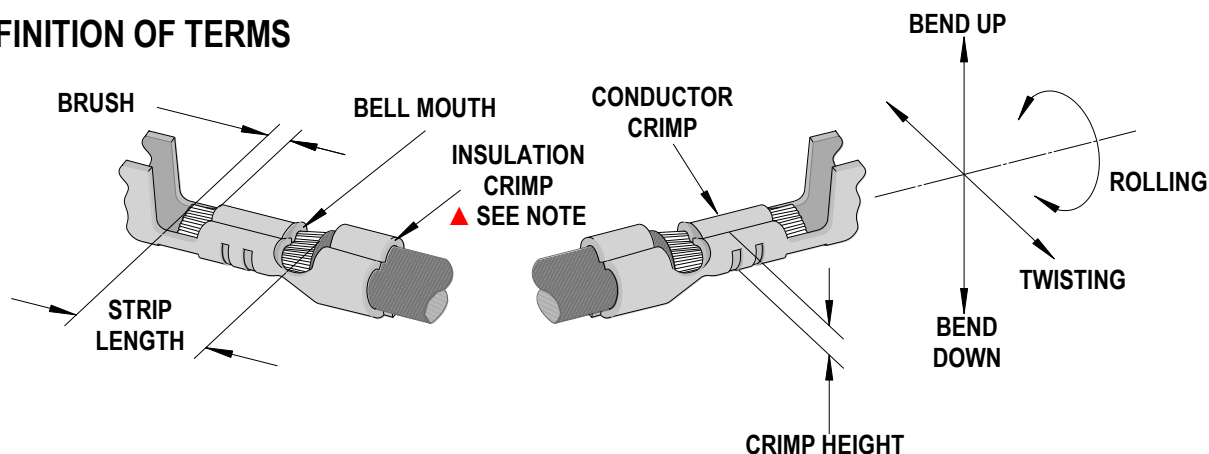

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

▲ Insulation Crimp Note:

Due to the terminal's insulation grip design and/or insulation diameter range, this tool uses "overlap" form geometry in the insulation punch. This produces an overlap insulation crimp (A620 – compliant). While the insulation punch profile may appear "lopsided", this is a normal condition for this tool. See figure to the right. (Some tools with multiple crimp pockets may not have the "overlap" profile on all pockets).

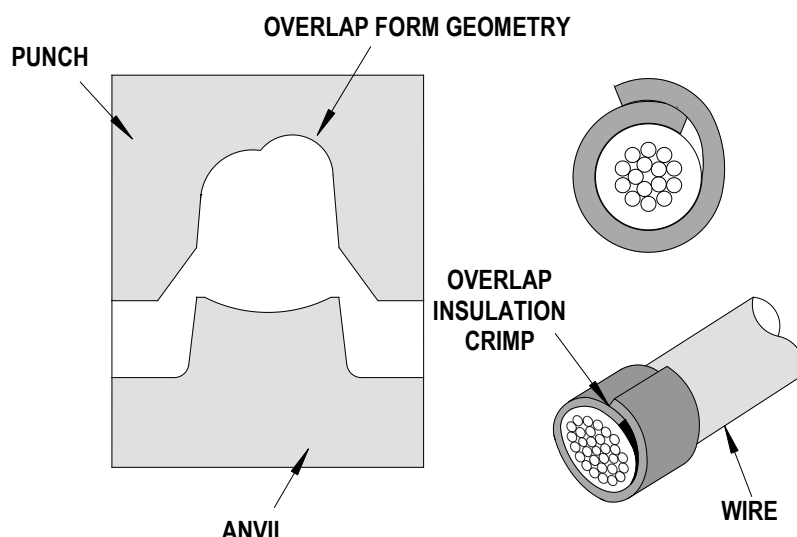**CONDITIONS:**

After crimping, the conductor profiles should measure the following (see notes below).

Terminal Series No.	Wire Size		Conductor				Pull Force Minimum		Profile		
	AWG	mm ²	Crimp Height (Ref)		Punch Width (Ref)		N	Lb.	A	B	C
			mm	In.	mm	In.					
35745	14	2.00	1.60-1.70	.063-.067	2.50	.098	147.1	33.1		X	
	16	1.30	1.50-1.60	.059-.063	2.50	.098	127.6	28.7	X		
	18	0.80	1.35-1.45	.053-.057	2.50	.098	97.8	22.0			X
35746	14	2.00	1.60-1.70	.063-.067	2.50	.098	147.1	33.1		X	
	16	1.30	1.50-1.60	.059-.063	2.50	.098	127.6	28.7	X		
	18	0.80	1.35-1.45	.053-.057	2.50	.098	97.8	22.0			X
35747	14	2.00	1.60-1.70	.063-.067	2.50	.098	147.1	33.1		X	
	16	1.30	1.50-1.60	.059-.063	2.50	.098	127.6	28.7	X		
	18	0.80	1.35-1.45	.053-.057	2.50	.098	97.8	22.0			X
35748	14	2.00	1.60-1.70	.063-.067	2.50	.098	147.1	33.1		X	
	16	1.30	1.50-1.60	.059-.063	2.50	.098	127.6	28.7	X		
	18	0.80	1.35-1.45	.053-.057	2.50	.098	97.8	22.0			X
♦ To Achieve IPC-A-620 Crimps, the following over-all wire insulation diameter ranges are recommended: <ol style="list-style-type: none"> Profile A: 2.30-3.20mm (.091-.126 inch) Profile B: 2.80-3.60mm (.110-.142 inch) Profile C: 2.00-2.80mm (.079-.110 inch) 											



Tool Qualification Notes

- (Ref) means that the dimension provided is approximate because of the wide range of wires, conductor stranding, insulation diameter and insulation hardness.
- An occasional conductor crimp height measurement should be performed, and it should be used as the final criterion for an acceptable crimp. It must lie between the minimum and maximum crimp height specification. Refer to Molex Quality Crimping Handbook 63800-0029 for additional information on crimping and crimp testing.
- In addition, an occasional pull force test may be performed. It must exceed the minimum pull force specification. Pull force should be measured with no influence from the insulation crimp. To ensure this, strip the wire long enough so the terminal insulation grips do not contact the wire insulation.

Notes

1. This tool should only be used for the terminals and wire gauges specified on this document.
2. Variations in tools, terminals, wire stranding and insulation types may affect crimp height.
3. This tool is intended for the conductor sizes specified on this document. It may not give good insulation crimp support for insulation sizes outside of the specified range.
4. Molex does not repair hand tools. See warranty on page 5. The replacement parts listed are the only parts available for repair. If the handles or crimp tooling become damaged or worn, a new tool must be purchased.

CAUTION: Crimp only Molex terminals listed above with this tool. Do not crimp hardened objects as damage can occur to the tool or die.

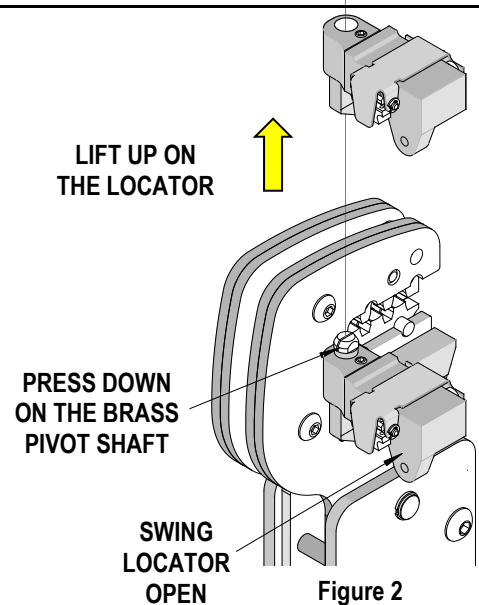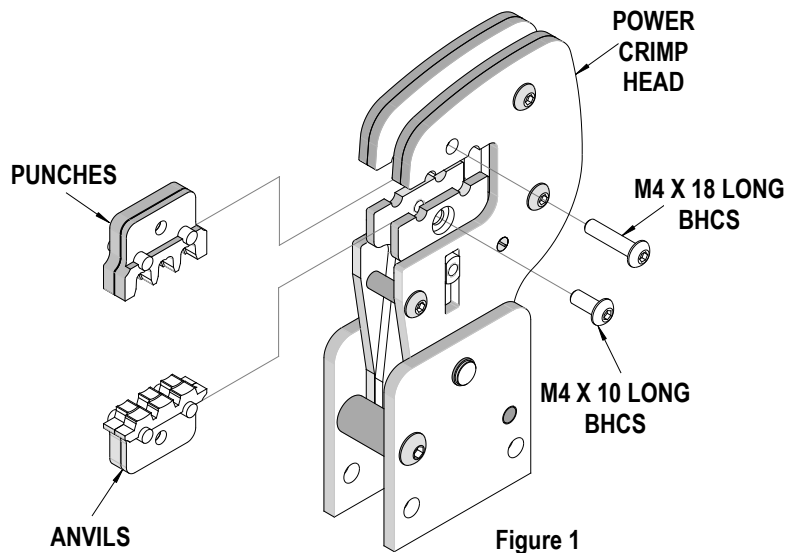

INSTALLATION

To install the Tool Kit into the Power Crimp Head follow the steps below:

Anvils and Punches Installation

1. Insert the Anvils into the bottom slots of the nest. Install the M4 x 10 long BHCS and tighten in place.
2. Insert the Punches into the top slots of the nest. Install the M4 x 18 long BHCS and tighten in place. See Figure 1.

Locator Installation and Removal

Follow the steps below to install or replace the locator. See Figure 2.

To install the locator

1. Position the locator with the hole over the brass pivot shaft and snap it into place.

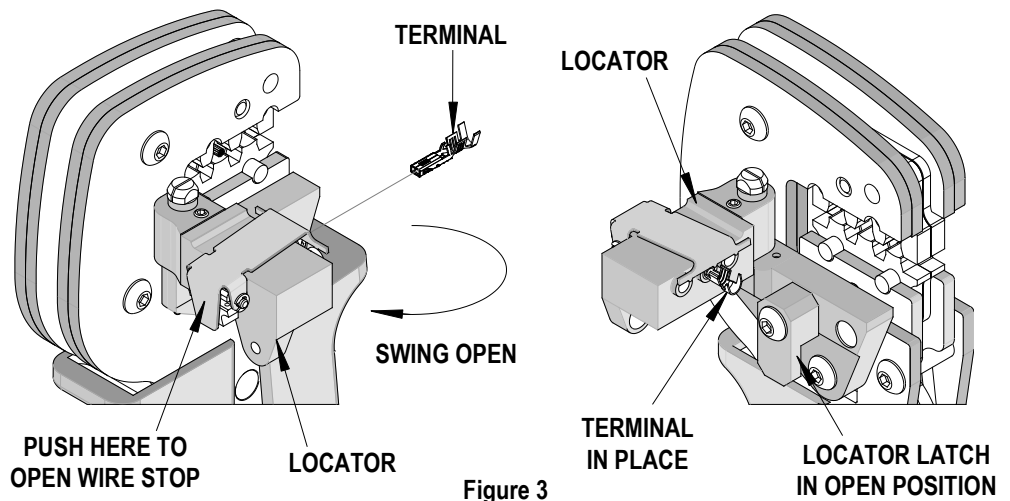


Figure 3

To remove the locator

1. Open the crimp hand tool.
2. Swing the existing locator open and away from the hand tool.
3. Firmly press down on the brass pivot shaft with your thumb, while pulling the locator up. Slip the locator off the top of the brass pivot shaft.

OPERATION

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

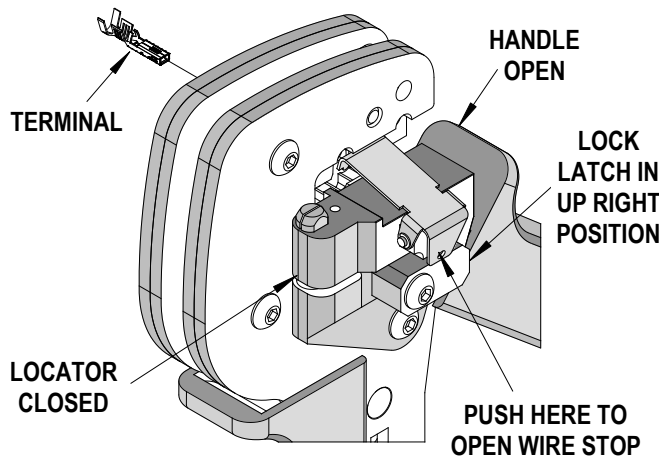


Figure 4

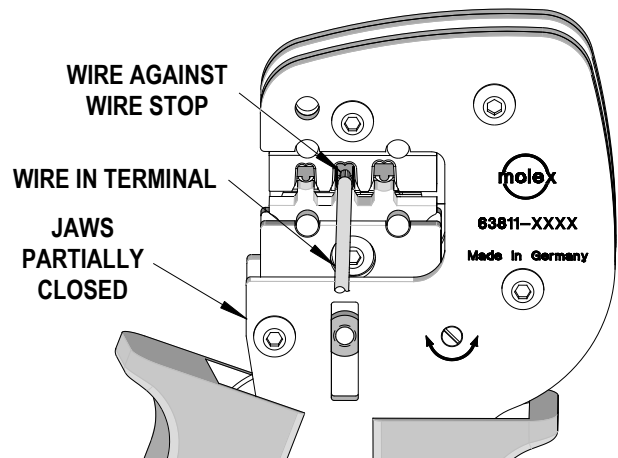


Figure 5

Crimping Terminals

1. Select the desired terminal listed in the preceding charts.
2. Swing the terminal locator away from the crimp tool shown in Figure 3. Some terminals with large insulation grips may interfere with the crimp tooling when swinging the locator into position. The terminal must then be loaded into the locator in the closed crimp position. See Figure 4.
3. Press down on the wire stop on the locator as shown in Figure 4. Insert the proper terminal into the proper nest opening. Make sure when choosing the nest opening, it will correspond with the profile on the hand tool. See Figure 5.
4. Return the locator to its original position.
5. Insert the proper wire over the terminal. Gently touch the wire stop with the end of the wire. See Figure 5 and 6.
6. Compress the terminal by squeezing the tool handles until the ratchet mechanism cycle has been completed. Release handles to open the jaws.

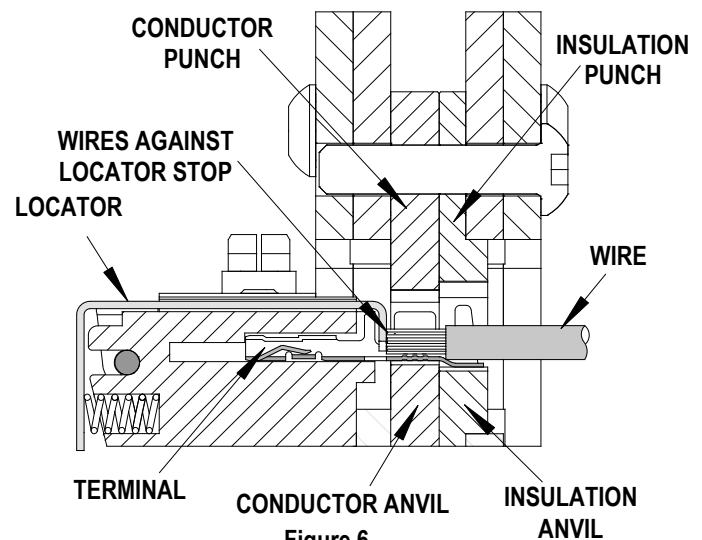


Figure 6

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

7. Remove the crimped terminal from the terminal locator by pressing down on the wire stop and gently pulling on the wire. The terminal locator can be in either position.
8. Visually inspect the crimped terminal for proper crimp location.

For the Battery Power Tool:

1. Cycle the Battery Power Tool to crimp the terminal to the wire.
2. Remove the crimped terminal from the terminal locator by pressing down on the wire stop and gently pulling on the wire. The terminal locator can be in either position.
3. Visually inspect the crimped terminal for proper crimp location.

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

1. Remove dust, moisture and other contaminants with a clean brush, or soft, lint-free cloth.
2. Do not use any abrasive materials that could damage the tool.
3. Make certain all pins; pivot points and bearing surfaces in the tool head are protected with a thin coat of high quality machine oil. Do not oil excessively. This tool was engineered for durability, but like any fine piece of equipment, it needs cleaning and lubrication for a maximum service life of trouble-free crimping. The use of light oil, such as 30 weight automotive oil, every 5,000 crimps or monthly, will significantly enhance the tool life and ensure a stable calibration. See Figure 7A or 7B for lubrication points.
4. Store the tool in a clean and dry area when not in use.

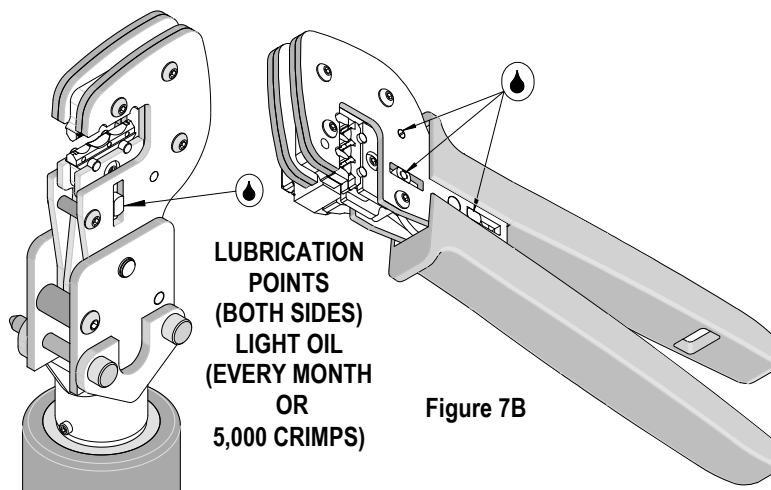


Figure 7A

Figure 7B

Miscrimps or Jams for Crimp Hand Tools Only (See Figure 11)

Should this tool ever become stuck or jammed in a partially closed position, **Do Not force the handles open or closed.** The tool will open easily by rotating the small slotted screw marked with an arrow. See Figure 11.

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long-life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, Molex will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused or damaged tools. This tool is designed for hand use only. Any clamping, fixturing or use of handle extensions voids this warranty.

CAUTION: Repetitive use of this tool should be avoided.

CAUTIONS

1. Manually powered hand tools are intended for low volume or field repair. This tool is **NOT** intended for production use. Repetitive use of this tool should be avoided.
2. Insulated rubber handles are not protection against electrical shock.
3. Wear eye protection at all times.
4. Use only the Molex terminals specified for crimping with this tool.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals and tooling.

Certification


Molex does not certify or re-certify commercial grade hand tools but rather supplies the following guidelines for customers to re-certify hand tools or determine tool life:

1. When the hand tool is no longer capable of achieving minimum conductor crimp height, it should be taken out of service and replaced.
2. The tool frame is very difficult to disassemble and reassemble. Customer repair is not recommended.

APPLICATIONS FOR THE POWER CRIMP HEAD

The chart below shows all applications for this Power Crimp Head:

Tool Order No.	Tool Description	Crimp Head Order No.	Crimp Head Description	Figure No.
63819-0600	Hand Crimp Tool	---	---	8
63816-0270	Battery Power Tool (110 V)	63816-1915	Power Crimp Head	9
63816-0280	Battery Power Tool (220 V)	63816-1915	Power Crimp Head	9
63816-1900	Electric Crimp Machine	63816-1915	Power Crimp Head	10

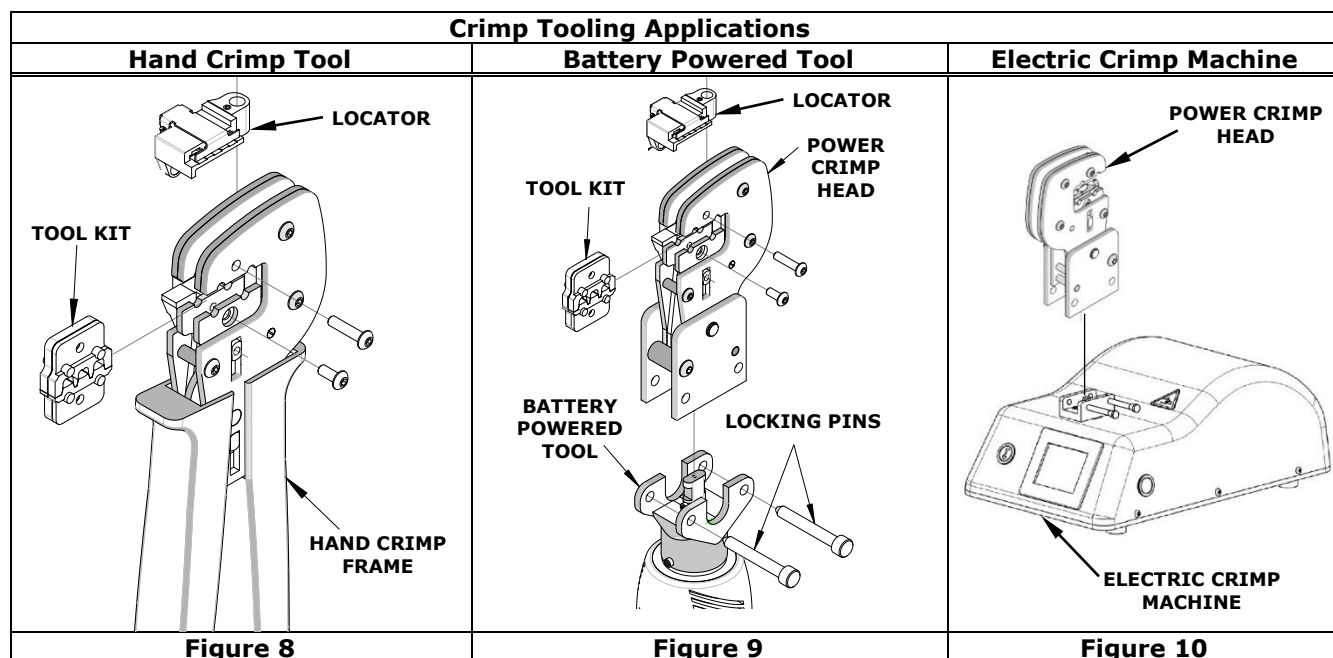

WARNING: *NEVER* operate service, install tool kits, or adjust the Power Crimp Head without proper instruction and without first reading and understanding the instructions in the proper Manual or Specification Sheet. See Chart above for the correct Manual or Specification Sheet.


WARNING: *NEVER* install tooling or service this tool while it is into any power source. Make sure the power is turned off.

CAUTION: Keep fingers away from the crimping area when operating this tool. It may cause severe injury.

CAUTION: Wear safety glasses when operating or serving this tool.

HAND TOOL PARTS LIST

Item Number	Order Number	Description	Quantity
REF	63819-0600	Hand Crimp Tool	Figure 11
1	---	Hand Crimp Frame	1
2	---	Tool Kit	1
3	63819-0673	Locator Base	1
4	63819-0675	Locator	1

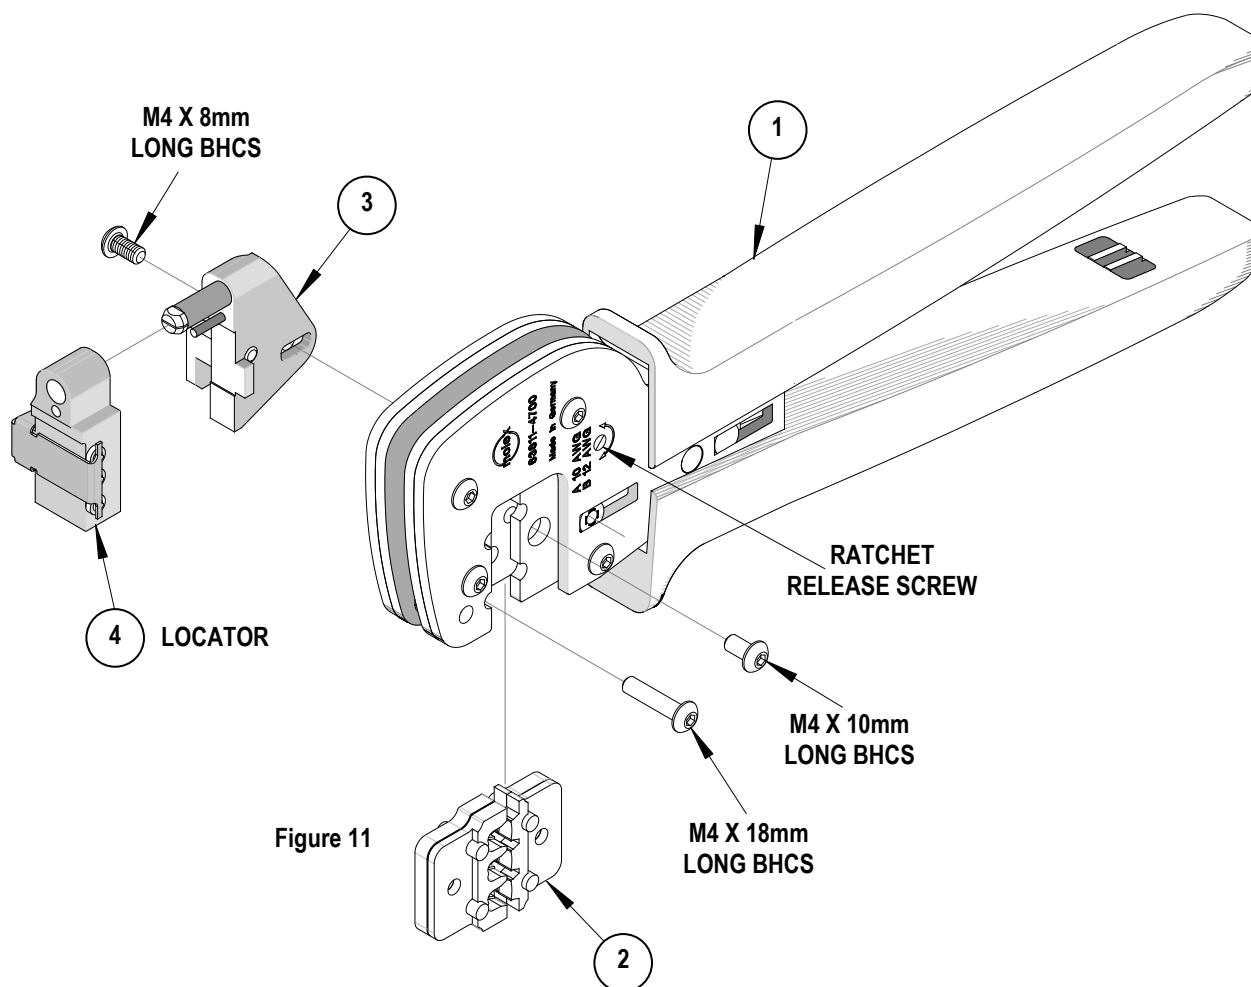

Application Tooling Support

E-Mail: toolingsupport@molex.com
Website: www.molex.com/applicationtooling

Molex is a registered trademark of Molex, LLC in the United States of America and may be registered in other countries; all other trademarks listed herein belong to their respective owners.